



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **ALFA ROMEO** MOD. **156*** YEAR. **02** 2nd sem. → PETROL ☐ DIESEL ☒

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION	Position the compact alarms and the sirens behind the left lateral headlamp.																					
CENTRAL UNIT POSITION	The modular systems and the modules should be positioned under the dashboard, driver's side.																					
POWER SUPPLY	+30: connect to the general supply wiring at the entrance of the fuse box. -31: connect directly to the car body.																					
IGNITION WIRE	+15/54: connect to the RED/ORANGE wire located in the 20 way white connector in the front part of the fuse box. Alternatively, in the wiring harness located under the sill cover, driver's side.																					
DIRECTION INDICATORS	Connect to the 1 mm ² LIGHT BLUE wire in the 20 way white connector and LIGHT BLUE/BLACK in the 12 way connector. These connectors are located in the front part of the fuse box, under the dashboard, drivers side. Alternatively in the wiring harness under the sill cover, driver's side.																					
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the BROWN/WHITE wire in the wiring harness coming out of the connector of the central located behind the glove compartment, passenger's side. Front window, passenger's side: cut the VIOLET/WHITE wire in the wiring harness coming out of the connector of the central located behind the glove compartment, passenger's side. Rear window, driver's side: cut the YELLOW/RED wire in the wiring harness under the sill cover, driver's side. Rear window, passenger's side: cut the LIGHT BLUE/GREEN wire in the wiring harness under the sill cover, driver's side.																					
ACTIVAT./DEACTIVATION CONTROLS	Connections antithefts/vehicle <table><tr><th>Art. 3800</th><th>Vehicle</th><th>Position</th></tr><tr><td>YELLOW/BLACK</td><td>WHITE/BLACK</td><td>Pos. nr.1 in the 16 way connector</td></tr><tr><td>GREY/BLACK</td><td>+30</td><td>supply in the fuse box</td></tr><tr><td>VIOLET</td><td>+30</td><td>supply in the fuse box</td></tr><tr><td>ORANGE</td><td>+30</td><td>supply in the fuse box</td></tr><tr><td>VIOLET/WHITE</td><td>+30</td><td>supply in the fuse box</td></tr><tr><td>ORANGE/WHITE</td><td>+30</td><td>supply in the fuse box</td></tr></table> <ul style="list-style-type: none">For 'Station Wagon' vehicles the radio receiver central is placed in the boot behind the plastic bulkhead, on the passenger's side wheel house.For 'Sedan' vehicles the radio receiver central is placed under the shelf of the rear window (keep off the cover inside the boot).	Art. 3800	Vehicle	Position	YELLOW/BLACK	WHITE/BLACK	Pos. nr.1 in the 16 way connector	GREY/BLACK	+30	supply in the fuse box	VIOLET	+30	supply in the fuse box	ORANGE	+30	supply in the fuse box	VIOLET/WHITE	+30	supply in the fuse box	ORANGE/WHITE	+30	supply in the fuse box
Art. 3800	Vehicle	Position																				
YELLOW/BLACK	WHITE/BLACK	Pos. nr.1 in the 16 way connector																				
GREY/BLACK	+30	supply in the fuse box																				
VIOLET	+30	supply in the fuse box																				
ORANGE	+30	supply in the fuse box																				
VIOLET/WHITE	+30	supply in the fuse box																				
ORANGE/WHITE	+30	supply in the fuse box																				
IMMOBILISATION POINT 1	Gasoiil pump Cut the BLACK/VIOLET wire coming out of the wiring harness of the inertial switch located under the driver's side seat.																					
IMMOBILISATION POINT 2	Central supply Cut the ORANGE wire in a connector coming out of the central engine plant located under the dash board, passenger's side.																					
STARTER	+50: Cut the 2 mm ² RED/BLACK wire located in the wiring harness coming out of the connector of the ignition key.																					
BONNET SWITCH	Install an additional switch on the front headlamp support plate, driver's side.																					
DOORS SWITCH	Connect to the WHITE wire temporized lamp at the position nr. 1, in the 16 way black connector coming out of the central locking unit located behind the passenger's side glove compartment.																					
BOOT SWITCH	Connect to the RED wire, at the position nr. 14, in the 16 way black connector coming out of the central locking unit located behind the passenger's side glove compartment.																					