



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **ALFA ROMEO**

MOD.

**166\***

YEAR. **01** →

PETROL ☒  
DIESEL ☐

\* Models with original equipment keyless entry system.

#### ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment between the ABS system and the lights group, driver's side.

#### CENTRAL UNIT POSITION

The modular systems and the modules should be positioned under the passenger's side sill cover or, under the dashboard, driver's side.

#### POWER SUPPLY

**+30:** connect to the 5 mm<sup>2</sup> RED wire of the general driver connector of the fuse box.  
**-31:** connect directly to the car body.

#### IGNITION WIRE

**+15/54:** Connect to the 0,5 mm<sup>2</sup> LIGHT BLUE wire located in the bundle of cables under the sill cover, driver's side.

#### DIRECTION INDICATORS

Connect to the 1 mm<sup>2</sup> LIGHT BLUE and LIGHT BLUE/BLACK wires located in the bundle of cables under the sill cover, driver's side.

#### ELECTRIC WINDOWS

##### Positive control signal

##### Front window, driver's side:

cut the 1,5 mm<sup>2</sup> LIGHT BLUE/RED wire.

##### Front window, passenger's side:

cut the 1,5 mm<sup>2</sup> GREY wire.

These wires are in the connector coming out of the green window operating central located under the central tunnel. It is possible to come in keeping off the left lateral panel, passenger's side.

##### Rear window, driver's side:

Cut the 1,5 mm<sup>2</sup> GREY/RED wire.

##### Rear window, passenger's side:

cut the 1,5 mm<sup>2</sup> BROWN wire.

These wires are in the connector coming out of the black window operating central located behind the right lateral panel, passenger's side.

#### ACTIVAT./DEACTIVATION CONTROLS

##### Connections antitheft/vehicle

##### Art.3800

YELLOW/BLACK

##### Vehicle

Positive

##### Position

in the fuse box

GREY/BLACK

Positive

in the fuse box

VIOLET

GREY/BLACK

original BLK relay

ORANGE

Positive

in the fuse box

VIOLET/WHITE

Positive

in the fuse box

ORANGE/WHITE

Positive

in the fuse box

The GREY/BLACK wire is located in the wiring harness coming out of the radio central unit placed behind the driver's side boot covering.

#### IMMOBILISATION POINT

##### Fuel pump

Cut the 1,5 mm<sup>2</sup> PINK/WHITE wire located in the bundle of cables under the left sill cover, driver's side.

#### STARTER

**+50:** Cut the BLACK wire located in the wiring harness coming out of the 3 way black connector placed on the right of the steering column.

#### BONNET SWITCH

Install an additional switch on the front headlamp support grill, driver's side.

#### DOORS SWITCH

Connect to the WHITE/BLACK wire located in the wiring harness coming out of the 10 way white connector placed behind the left lateral panel, driver's side.

#### BOOT SWITCH

Connect to the 1 mm<sup>2</sup> VIOLET/WHITE wire located in the wiring harness coming out of the 20 way white connector placed behind the right lateral panel, passenger's side.