



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

**AUDI**

MOD.

**A2\***

YEAR.

**01** →

PETROL  
DIESEL



\* Models with original equipment keyless entry system.

#### ALARM/SIREN POSITION

Position the compact alarms and the sirens under the motor cooling bowl located on the left of the engine compartment.

#### CENTRAL UNIT POSITION

The modular systems and the modules should be positioned under the moquette, on front of the driver's side seat.

#### POWER SUPPLY

**+ 30:** connect with a 6 mm<sup>2</sup> eyelet cable terminal to the original pin of the positive shunting located under the moquette, on front of the driver's side seat.  
**- 31:** Connect with a 8 mm<sup>2</sup> eyelet cable terminal to the original ground pin located on the base of the driver's side member, behind the left lateral panel.

#### IGNITION WIRE

**+ 15/54:** Connect to the 2,5 mm<sup>2</sup> BLACK/BLUE wire located in the wiring harness coming out of the ignition key.

#### DIRECTION INDICATORS

Connect to the BLACK/WHITE and BLACK/GREEN wires located in the wiring harness behind the driver's side sill cover.

#### ELECTRIC WINDOWS

##### Positive control signal Comfort closing

The closing of the electric windows is obtained timing the GREY/GREEN wire located at the position nr. 8, placed in the 12 way black connector coming out of the central incorporated to the driver's side front window motor.

#### ACTIVAT./DEACTIVATION CONTROLS

##### Connections antitheft/vehicle

Art.38XX	Vehicle	Position
GREY/BLACK	GREY/BLUE	position nr.5
YELLOW/BLACK	BROWN/BLUE	position nr.4
VIOLET/WHITE	ground	car body
ORANGE	ground	car body
VIOLET	GREEN/BLACK	position nr.11
ORANGE/WHITE	ground	car body

**Note:** The BROWN/ BLUE and GREY/BLUE wires at the positions nr.4 and nr. 5 are located in the 12 way black connector, directly on the coming out of the central incorporated to the electric windows motor, inside the driver's side door.

#### IMMOBILISATION POINT

##### Fuel pump

Cut the 1,5 mm<sup>2</sup> GREEN/YELLOW wire located at the position nr. 15 of the 17 way black connector, in the relays group placed under the moquette, on front of the driver's side seat.

#### STARTER

**+50:** Cut the 2,5 mm<sup>2</sup> RED/GREEN wire located in the wiring harness coming out of the ignition key.

#### BONNET SWITCH

Connect to the 0,5 mm<sup>2</sup> YELLOW/RED at the position nr. 15 of the 17 way red connector located behind the left lateral side, driver's side

#### DOORS SWITCH

Connect to the 0,75 mm<sup>2</sup> BROWN/WHITE wire, at the position nr. 2, of the 12 way black connector of the radio central unit located under the moquette, on front of the driver's side seat.

#### BOOT SWITCH

Connect to the 1 mm<sup>2</sup> BROWN/VIOLET wire, at the position nr. 11, of the 16 way light brown connector, of the radio central unit located under the moquette, on front of the driver's side seat.