



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

FIAT

MOD.

CROMA

YEAR.

06

GENERAL CONNECTIONS FOR INSTALLATION

ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment, driver's side. Pass the cables using the original fairlead located near the clutch pedal.
Position the modular systems and the modules under the dashboard driver's side.

POWER SUPPLY

+30: connect to the WHITE/RED wire located in the 2 way black connector, in the fuse box.
-31: connect directly to the original ground terminal.

IGNITION WIRE

+15/54: connect to the YELLOW wire, at the position nr. 18, in the 32 way connector with violet release, in the upper part of the fuse box.

DIRECTION INDICATORS

Connect to the wires: BLACK/WHITE at the position nr.38 and LIGHT BLUE at the position nr.39 in the 40 way blue connector with red release, in the left part of the fuse box.

ELECTRIC WINDOWS

Not available

IMMOBILISATION POINT

Fuel pump

Cut the BROWN/WHITE wire at the position nr.32, in the 32 way black connector, in the upper part of the fuse box.

STARTER

1st solution +50: cut the VIOLET/RED wire at the position nr.3, in the 12 way blue connector, on the ignition key.
2nd solution +50: cut the RED/BLACK wire in the 20 way light blue connector, in the fuse box.
Note: It is suggested to verify that the electrical input would be compatible with the product installed, eventually install an additional relay.

BONNET SWITCH

Install an additional switch on the headlamp support plate.

DOORS SWITCH

Connect to the GREEN/WHITE wire in the wiring harness coming out of the connector of the lamp.

BOOT SWITCH

Connect to the BLACK/VIOLET wire in the wiring harness coming out of the connector of the boot push button.



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

CONNECTIONS FOR ANTITHEFT SYSTEM WITH ORIGINAL EQUIPMENT KEYLESS ENTRY SYSTEM

ACTIVAT./DEACTIVATION CONTROLS	Connections antitheft/vehicle 3868 serie	Vehicle	Position
	YELLOW/BLACK	ORANGE/GREEN	Wiring harness coming out driver's side door
	GREY/BLACK	ORANGE/BLACK	Wiring harness coming out driver's side door
	ORANGE	BLACK/WHITE	Pos. nr.38 in the blue connector
	VIOLET	ground	Car body
	VIOLET/WHITE	ground	Car body
	ORANGE/WHITE	ground	Car body

The BLACK/WHITE wire, at the position nr.38, is located in the 40 way blue connector with red release, on the left of the fuse box. Follow the "A diagram" of the dedicated installations manual inside the kit of the antitheft.

CONNECTION FOR COBRA CONNEX SATELLITE ANTITHEFT SYSTEM

GSM ANTENNA POSITION Position the GSM antenna on the left, under the dashboard, driver's side.

GPS ANTENNA POSITION Position the GPS antenna on the left, under the dashboard, driver's side.

HORN CONTROL **Negative control**
Connect to the BLACK/BROWN wire located in the wiring harness coming out of the connector of the airbag, in the lower part, along the steering column.

CONNECTION FOR ANTITHEFT SYSTEM CONTROLLED BY RADIO

CENTRAL DOORS LOCKING **Negative control**
Connect to the WHITE wire (locking) and to the LIGHT BLUE wire (opening), in the wiring harness coming out of the driver's side door.