



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	FIAT	MOD.	IDEA*	YEAR	04 →	PETROL <input checked="" type="checkbox"/>	DIESEL <input type="checkbox"/>
------	-------------	------	--------------	------	-------------	--	---------------------------------

* Models with original equipment key less entry system

ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment, on the battery support. Pass the cables using the original fairlead located behind the ABS group.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, on the left of the steering wheel.
POWER SUPPLY	+30: connect to the RED wire of the general supply in the fuse box. -31: connect to the ground terminal located behind the driver's side bulkhead.
IGNITION WIRE	Connect to the RED/GREEN wire, at the position nr. 19, in the 20 way brown connector located in the anterior part of the fuse box, under the dashboard driver's side.
DIRECTION INDICATORS	Connect to the wires: WHITE at the position nr. 3, BLUE/RED at the position nr. 13, WHITE/GREEN at the position nr.2 and GREY at the position nr. 12, in the 40 way black connector and to the wires: BLUE at the position nr.39, ORANGE at the position nr.38 in the 40 way light blue connector. The black and light blue connectors are located in the anterior part of the fuse box, under the dashboard driver's side. Note: Separate the lines by means of diodes.
ELECTRIC WINDOWS	Positive control signal The locking of the electric windows is obtained timing to 24s the WHITE/GREY wire, the same used for the door's locking at 24s.
ACTIVAT./DEACTIVATION CONTROLS	Connections antitheft/vehicle Refer to the fitting diagram nr. 210
IMMOBILISATION POINT	Fuel pump Cut the VIOLET/YELLOW wire, at the position nr.32, in the 32 way black connector in the anterior part of the fuse box located on the left of the steering wheel, under the driver's side dashboard.
STARTER	+50: Cut the BROWN wire located in the wiring harness coming out of the connector of the ignition key.
BONNET SWITCH	Install an additional switch on the headlamp support plate.
DOORS SWITCH	Note: the signal is timed. Connect to the WHITE wire at the position nr.21, in the 40 way black connector, located in the anterior part of the fuse box, under the driver's side dashboard.
BOOT SWITCH	Connect to the BLACK/LIGHT BLUE wire at the position nr. 36, in the 40 way black connector, located in the anterior part of the fuse box, under the driver's side dashboard.

FITTING DIAGRAM NR. 210

**Diagram to connect 3800 on
FIAT IDEA year 2004**

